

Lubri-Trak Lubricator

Horizontal Carousels



Maintenance

Check oil level daily and refill reservoir when required. Check the lubricator periodically for loose or broken tubing, fittings and connections.

Filter Replacement

A filter at the pump inlet protects the Lubri-Trak system. The filter disc should be inspected every six months. If not clean, replace. To remove the filter, pry the filter housing cup loose in several places with a screwdriver. Replace new filter group, making sure coarse screen is next to pump body when installed. Replace and secure housing cup.

Service

Too little oil to carousel track: Check for broken actuator or misadjusted cam assembly, broken or cracked tubing or loose connections. Check suction filter and replace as necessary. Check applicator assembly (*Data Sheet #21526*). If lubricator is functioning normally, increase discharge output by turning control bypass valve clockwise. Maximum discharge is obtained at full stop position.

Too much oil to carousel track: After completing a full run-in period, reduce oil output from lubricator by turning control bypass valve counter-clockwise in half turn increments (180°).

Caution: Do not turn more than two turns in one instance.

How to Order


Name	Part #
Lubri-Trak Lubricator	20655C

When ordering, specify by name and part number, e.g. Lubri-Trak Lubricator, Part #20655C.

Service Parts

Order by part number and description shown below. For major repairs requiring parts not identified, return lubricator for factory repair.

Item	Part #	Description
1	D3086C-KIT	Reservoir Assy, 1 Pint
2	S178	Service Filter Group

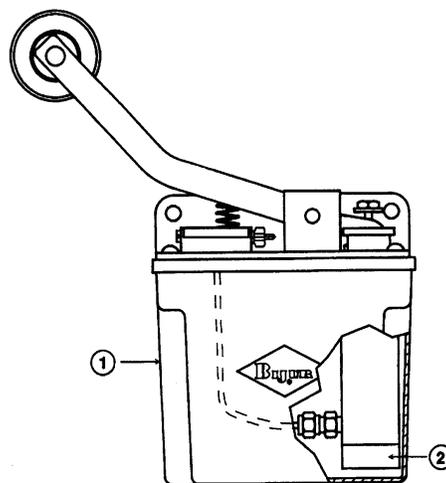

ATTENTION

Use clean oil only of the type and viscosity recommended by machine manufacturer.

ATTENTION

Replace filter group annually.

BIJUR DELIMON INTERNATIONAL

(919) 465 4448 LOCAL
 (800) 631 0168 TOLL-FREE
 (919) 465 0516 FAX

WWW.BIJURDELIMON.COM

2100 Gateway Centre Blvd., Suite 109
 Morrisville, NC 27560

21525 • R3 12/07