Pressure Gauges

System Components



General

Pressure gauges are used as a convenient means of indicating pressure developed in the distribution system. They are supplied either with standard indicators to show the pressure during the lubrication period or with a standard indicator plus a red follower finger which is carried along to the maximum pressure position during the pressure period. The follower finger remains as evidence of the maximum pressure position until manually reset to zero.

Selection of Pressure Range

- + Use 30 psi gauges only when recommended by a Bijur Delimon engineer
- + Use 100 psi gauge with Type P or R Lubricators
- + Use 160 psi gauge with SureFire SLR Lubricators
- + Use 200 psi gauge with Type A Lubricators
- + Use 400 psi gauge with V5W, VII or VIII Lubricators
- + Use 800 psi gauge with SureFire PDI Lubricators

How to Order

| Description | Pressure | Part # |
|---|---|--|
| Pressure gauge | 100 psi (7 bar) 200 psi (14 bar) | B4340 B3839 |
| Pressure gauge w/ follower finger | 100 psi (7 bar) 200 psi (14 bar) | B5609 B4581 |
| Pressure gauge w/ bracket | 30 psi (2 bar) 100 psi (7 bar) | B4310 B4363 |
| Pressure gauge w/ bracket & follower finger | 100 psi (7 bar) 200 psi (14 bar) | B5610 B5614 |
| Pressure gauge w/ tube adapter (5/16-24 female¹) & bracket | 100 psi (7 bar) | B4360 |
| Pressure gauge w/ tube adapter (5/16-24 Female¹), bracket & follower finger | 100 psi (7 bar) 200 psi (14 bar) | B5611 B4582 |
| Pressure gauge w/ tube adapter (5/16-24 Male²) & bracket | 100 psi (7 bar) | B4745 |
| Pressure gauge w/ tube adapter (5/16-24 Male²), bracket & follower finger | 100 psi (7 bar) 200 psi (14 bar) | B5612 B4895 |
| Pressure gauge w/ two-way header & bracket | 100 psi (7 bar) | B4364 |
| Pressure gauge w/ two-way header, bracket & follower finger | 100 psi (7 bar) 200 psi (14 bar) | B5613 B4583 |
| Pressure gauge w/ lower mounting 1/8" NPT Male | 160 psi (11 bar) 400 psi (28 bar) 800 psi (55 bar) | 23522 B9971 23411 |
| | Pressure gauge w/ follower finger Pressure gauge w/ bracket Pressure gauge w/ bracket & follower finger Pressure gauge w/ tube adapter (5/16-24 female¹) & bracket Pressure gauge w/ tube adapter (5/16-24 Female¹), bracket & follower finger Pressure gauge w/ tube adapter (5/16-24 Male²) & bracket Pressure gauge w/ tube adapter (5/16-24 Male²), bracket & follower finger Pressure gauge w/ tube adapter (5/16-24 Male²), bracket & follower finger Pressure gauge w/ two-way header & bracket Pressure gauge w/ two-way header, bracket & follower finger | Pressure gauge Pressure gauge w/ follower finger Pressure gauge w/ follower finger Pressure gauge w/ bracket Pressure gauge w/ bracket Pressure gauge w/ bracket & follower finger Pressure gauge w/ bracket & follower finger Pressure gauge w/ tube adapter (5/16-24 female¹) & bracket Pressure gauge w/ tube adapter (5/16-24 Female¹), bracket & follower finger Pressure gauge w/ tube adapter (5/16-24 Female¹), bracket & follower finger Pressure gauge w/ tube adapter (5/16-24 Female²) & bracket Pressure gauge w/ tube adapter (5/16-24 Male²) & bracket Pressure gauge w/ tube adapter (5/16-24 Male²), bracket & follower finger Pressure gauge w/ tube adapter (5/16-24 Male²), bracket & follower finger Pressure gauge w/ two-way header & bracket Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger Pressure gauge w/ two-way header, bracket & follower finger |

¹ Use compression bushing #B1371 and compression sleeve #B1061.

When ordering, specify by name, type, pressure and part number, e.g. Pressure Gauge, Type SM, 100 psi (7 bar), Part #B4745.

BIJUR DELIMON INTERNATIONAL

(919) 465 4448 LOCAL (800) 631 0168 TOLL-FREE (919) 465 0516 FAX

WWW.BIJURDELIMON.COM


2100 Gateway Centre Blvd., Suite 109 Morrisville, NC 27560

² Use compression bussing #B1095 and compression sleeve #B1061.




Dimensional Schematics


Type P and PF

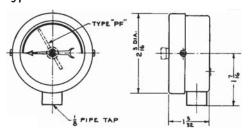


Type SM and SMF

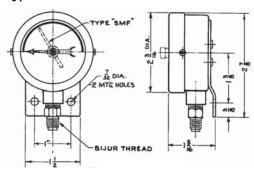


Type PB and PBF

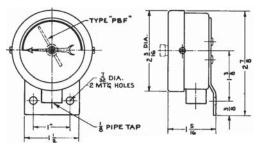


Type TA and TAF

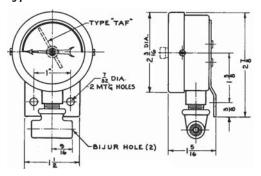


Type S and SF

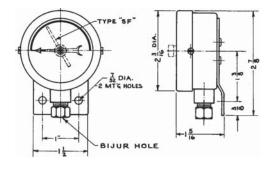

Type LM

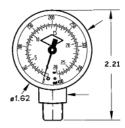

 

BIJUR DELIMON INTERNATIONAL

(919) 465 4448 LOCAL (800) 631 0168 TOLL-FREE (919) 465 0516 FAX

WWW.BIJURDELIMON.COM

2100 Gateway Centre Blvd., Suite 109 Morrisville, NC 27560