

LubeSite Extension Kit

Remote Filling - 6'FT.




General

LubeSite Extension Kit features a bracket to connect to your LubeSite Grease Feeder, nylon tubing and fittings. This design allows for a remote mounting of the LubeSite Grease Feeder up to 6' Feet. The RED or ORANGE spring must be used with your Grease Feeder depending on the type of grease used.

How to Order

Name	Part #
LubeSite Extension Kit	37704

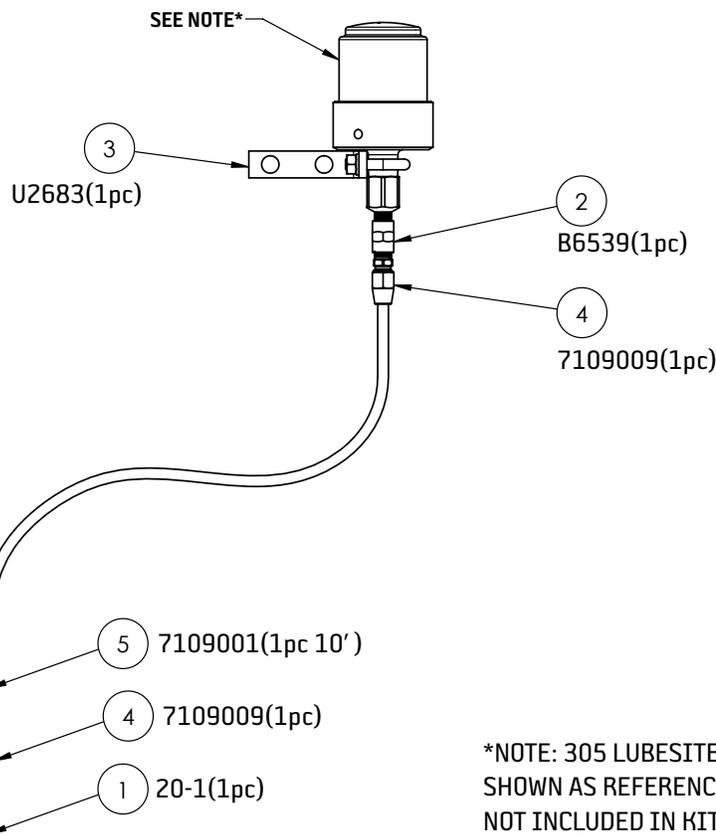

ATTENTION

305 LUBESITE SHOWN AS REFERENCE. NOT INCLUDED IN KIT.
 LubeSite Extension Kit can be used with series 200, 300, & 500.

Instructions

1. Fill LubeSite Grease Feeder as per Lube LubeSite Installation Instructions and mount to supplied bracket.
2. Fill tubing with grease. (This will remove all air from tubing.)
3. Unscrew cap from male connector. Take cap and ferrule off. First place cap on tubing, then ferrule. Push tubing into male connector. Tighten cap(over ferrule) to male connector.
4. Run tubing along desired path to the LubeSite unit and cut(a clean cut) to proper length.
5. Install second male connector(Part 1) to adapter (Part 3) and tighten.
6. Attach end of grease-filled tubing to connector on LubeSite by unscrewing cap from male connector. Take cap and ferrule off. First place cap on tubing, then ferrule. Push tubing into male connector. Tighten cap(over ferrule) to male connector.

BIJUR DELIMON INTERNATIONAL

(919) 465 4448 LOCAL
 (800) 631 0168 TOLL-FREE
 (919) 465 0516 FAX

WWW.BIJURDELIMON.COM

2250 Perimeter Park Dr., Suite 120
 Morrisville, NC 27560